




14'x12' Screen Lodge

Instructions apply to Part Number 9192-142

When You Are Ready To Set Up Your Shelter

- Select a level campsite clear of rocks, branches and other hard or sharp objects.
- Do not set up your shelter under trees.
- For easier set up, two or more people are recommended.

POLE ASSEMBLY PARTS

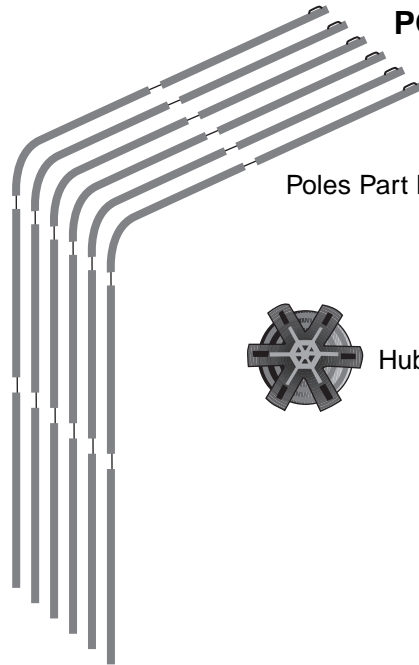


Poles Part No. 9191-101




Hub Part No. 9191-102

1 Pole Assembly

- Assemble and connect one pole at a time to the hub.
- Do not assemble poles completely.
- Go to the end of pole with the spring clip and assemble all but the last shock corded section. The pole should curve down plus one section. (illus. 2)
- Insert the end with the spring clip into one of the hub ports until it clicks into position. (illus. 1, 2)
- Repeat for each of the five remaining poles. (illus. 2)

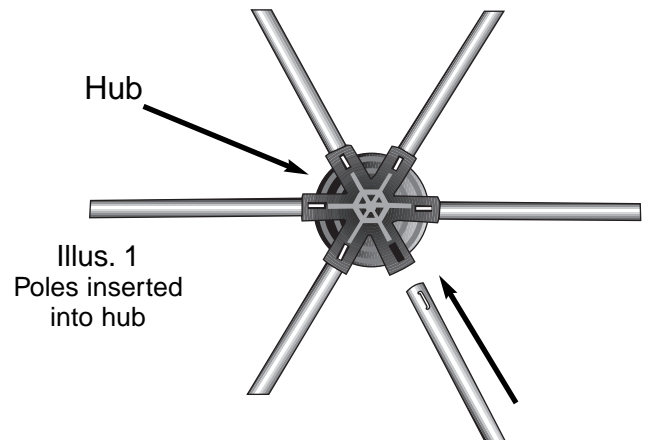


Illus. 1
Poles inserted
into hub

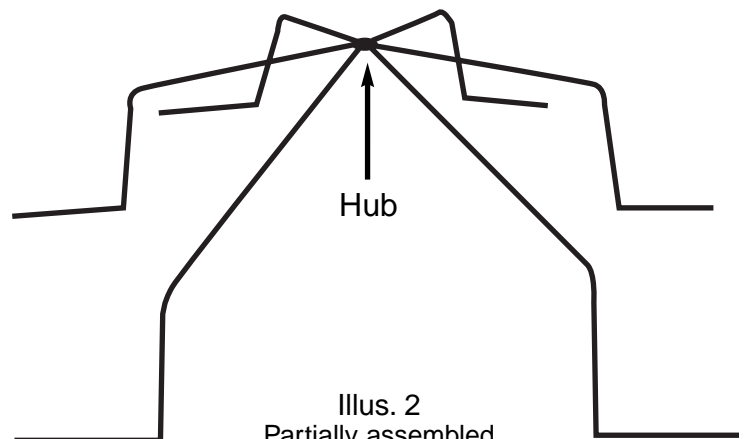


Illus. 2
Partially assembled
frame locked into hub

2 Attach Shelter to Frame


- Drape the shelter over the frame, positioning doors in the desired direction.
- Position each corner over the curve portion of the pole.
- Fully extend each pole by completing the interlocking of the shock corded pole sections.
- Insert the brass hook into the hole near the base of the pole (illus. 4, 5)
- From the inside of the shelter secure the pole frame to the shelter with the hook and loop closures. (illus. 6)
- Adjust poles to pull the shelter taut and stake down through the fabric loops at the end of each pole (illus. 5)
- Adjust hook straps to increase tautness (illus. 5)
- Attach guy lines to fabric guy loops at each corner and stake out (illus. 6)

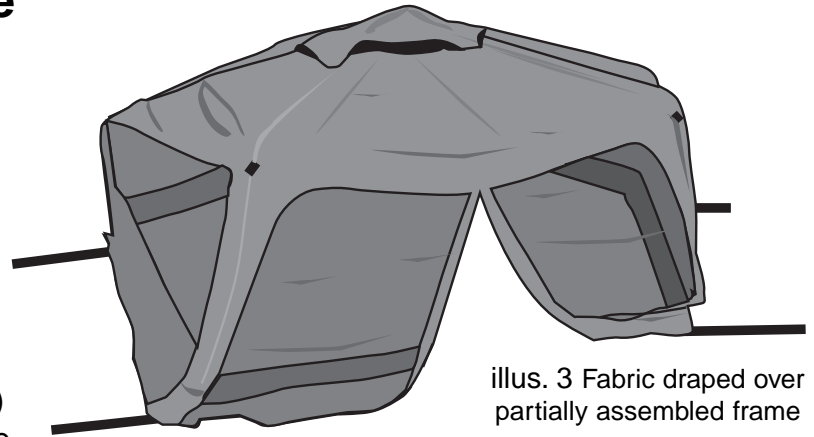

illus. 3 Fabric draped over partially assembled frame

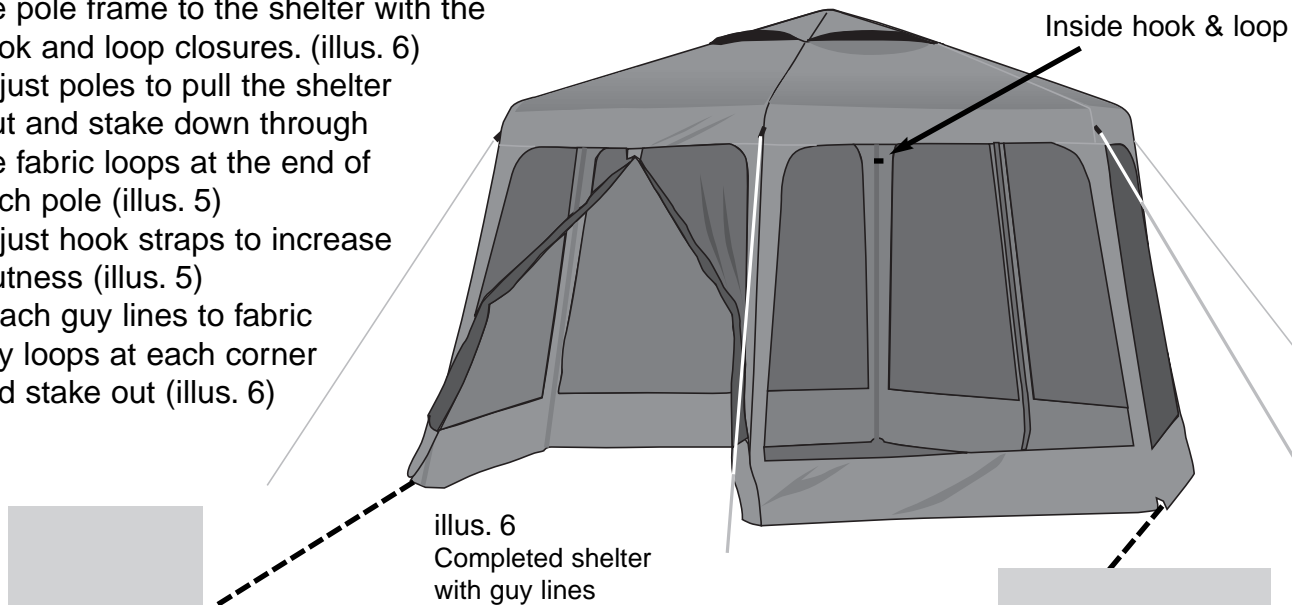


illus. 6 Completed shelter with guy lines

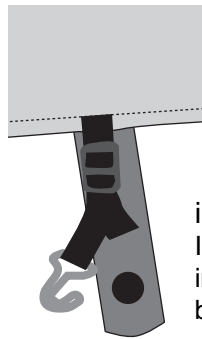

illus. 4 Insert Brass Hook into hole near the base of the pole

Use to adjust or tighten canopy

illus. 5 Stake through Stake Loop

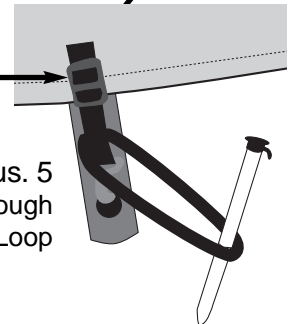

Things You Should Know

- Never store tent, even for a short period of time, without drying it thoroughly and brushing off caked dirt. Do not pack stakes or poles inside your tent. Use separate storage bag.
- STAKES SHOULD BE REMOVED BY PULLING ON THE STAKE ITSELF. NEVER PULL ON THE TENT FABRIC OR TENT STAKE LOOP TO REMOVE STAKE.
- TENT POLES SHOULD NOT BE LEFT TELESCOPED TOGETHER DURING STORAGE.
- Do not leave your tent set-up for weeks at a time, be aware that exposure to the ultraviolet rays of the sun can seriously damage material and/or cause it to become discolored.

WARNING: KEEP ALL FLAME AND HEAT SOURCES

AWAY FROM THIS TENT FABRIC. This tent meets the flammability requirements of CPAI-84. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.



THE COLEMAN CO., INC.

3600 N. Hydraulic • Wichita, Kansas 67219
1-800-835-3278 • www.coleman.com

MADE IN SRI LANKA